 


INSTRUCTION MANUAL

Streetwise Motion Detector with Auto Dialer, MODEL MA-80


CONTROLS

- | | |
|--|--------------------------|
| 1. Motion Sensor | 5. Keypad |
| 2. Speaker | 6. Telephone Plug Socket |
| 3. Mic | 7. Battery Compartment |
| 4. Low battery warning Indicator light | |

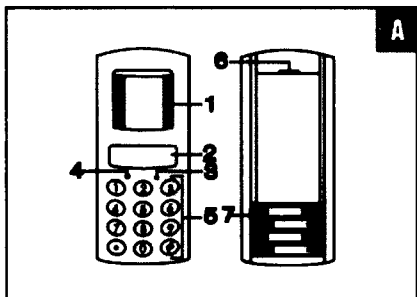

BATTERY INSTALLATION

 - The battery compartment is accessed from the rear of the unit by removing the screw from the base of the unit and lifting the rear cover (see diagram B).
- Insert four AAA size batteries (not included) following the polarity as shown in C. When the last battery is inserted the alarm will beep very loudly to indicate that the batteries are installed properly (see programming the alarm).
- Replace the back cover and reinstall the screw.

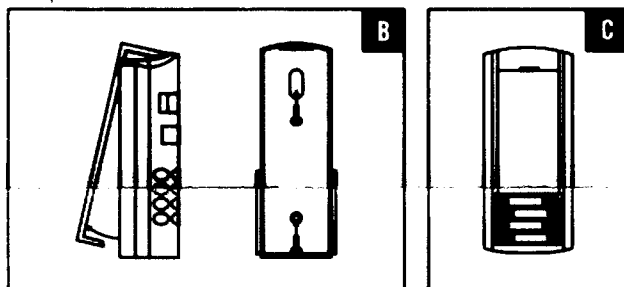

The Low battery warning indicator light will illuminate when the batteries need replacing.

INSTALLATION

- Place the alarm in the desired location.
- Remove the rear cover and fix it to the wall using the screws supplied.
- The alarm body can then be snapped into place onto the rear cover and secured using the screw at the base of the unit.

Please note: This alarm can also be used in a free standing position.

PROGRAMMING THE ALARM

Immediately after inserting the batteries, the 4-digit security code must be set. Simply press the desired 4 digit code onto the keypad. Do not press "0" as the first digit of your personal code as "0" is the digit to arm the alarm.

Note: The alarm unit must be re-programmed with your security code each time the batteries are removed or replaced. If you are required to change the personal code for any reason you must remove the batteries. Insert the batteries following diagram C. When the last battery is inserted you will hear a loud beep, now enter your new four digit security code. You do not need to remove the batteries to store any new telephone numbers or record a new voice message.

Storing telephone Numbers

Press * 1 and enter the first telephone number. Then press * to save the number. Press * 2 for the second number and so on. Maximum 3 sets of telephone number with max 16 digits can be stored.

Recording a message

Press # 1 * (the low battery indicator light will illuminate). You now have 6 seconds to record your personal message. Once the light goes off your recording time is over. The alarm unit has a permanent memory for stored telephone numbers and the recorded voice message. To change the telephone number or recorded message, repeat the steps above.

Using the MA80 as a silent alarm.

You have the option to disable the siren by pressing * 9. To reactivate the siren press # 9 #.

CONNECTION TO THE TELEPHONE UNIT

Remove the screw at the base of the unit and lift the rear cover off. Connect the telephone cord (included) into the alarm socket (#6 in diagram A). Plug the other end into the telephone jack on your wall. (Note: a splitter is included so that you can plug both the unit and a telephone into the same wall jack.) Note: This device can be used with a PABX phone system.

OPERATION


Leaving the protected area

Press keypad number 0. You will hear a confirmation tone. You now have 30 seconds to vacate the area before the unit is armed. After this time, if motion is detected, the alarm will start to dial the stored telephone numbers and the siren will sound 30 seconds after the first number is dialed (unless you have disabled the siren). All three stored telephone numbers will be dialed if the unit is activated unless the security code is entered to disarm the alarm. You may consider having only your cell phone called- then you could contact the police, a neighbor, etc.

Entering the protected area

Type in your 4-digit security code within 10 seconds in order to disarm the unit.

DETECTION AREA

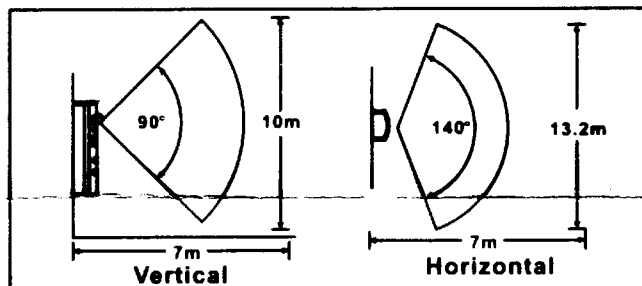

CARE AND MAINTENANCE

To clean the case simply use a soft, slightly damp cloth with water and wipe dry immediately.

Caution: Never use chemicals to clean the case, as they may cause damage to the plastic and cause the alarm to malfunction.

TROUBLE SHOOTING

The unit does not sound when the batteries are installed:

Ensure that the batteries are installed correctly according to the diagram in the battery compartment.

The alarm does not arm:

Ensure that the back plate of the alarm unit is secure to hold the batteries in place and that the red light comes on when the keypad buttons are pressed.

The red light located in the middle of the alarm is on:

This is the low battery warning indicator light. The batteries need replacing.

BATTERY PRECAUTIONS

When using this product follow these precautions at all times:

- Use only the appropriate size batteries.
- Be sure to follow the correct polarity when installing the batteries as indicated in the battery compartment. Incorrect polarity may cause damage to the alarm.
- Do not mix different types of battery such as Alkaline and Carbon-zinc or old batteries with new.
- If the alarm will not be used for long periods of time remove the batteries to prevent damage or injury from possible battery leakage.
- Do not recharge batteries not intended to be recharged as they can overheat and rupture. (Always follow the manufacturer's directions.)